



- **Application:** Please strictly abide relevant regulations and laws. This product should not be used for any illegal purposes. The user is fully responsible for its using purpose.
- **Battery:** If do not use this recording function after long time, please charged it fully before using.
- **File security:** This product is not a professional storage device. It does not guarantee the integrity and security of saved files. Please back up your important documents on the computer or other storage device timely.
- **Video quality:** This product is not a professional video recording device. It does not guarantee the video effect can meet your expectations.
- **Operating temperature:** 0—40°C
- **Operating humidity:** 20% -80%. This product does not have the waterproof function. So it can not work under the humid environment.
- **Shooting brightness:** Do not expose the camera directly to strong light, such as the sun light, to avoid damage to optical devices.
- **Cleaning:** Do not use it under the environment with high dust density to avoid the contamination of camera lens or other components. It may affect the working of camera. The camera lens can be cleaned gently by paper or cloth which is used to clean glasses.
- **Other matters:** The product belongs to sophisticated- electronic products. Please make sure that it is not damaged by strong impact and strong vibration. Do not use it in the place with strong magnetic or strong electric power.
- **Note:** Please contact with your local dealer for other matters.

5. Warning:

Parameters	
Item	AVI
Video format	M-JPEG
Video encoding	640*480(basic) or 1280*960 (plus)
Sound Sample Rate	24KHz
Media playing software	Attached software of the operating system or Mainstream audio and video media playing software
The ratio of image	4:3
Supporting system	Windows me/2000/xp/2003/vista: Mac 10.4:
Linux:	
Charging voltage	DC-5V
Interface type	Stand USB
Storage support	Hard flash
Battery type	high-capacity lithium polymer

4. Parameters

charging, the red light flashes slowly. When the battery is fully recharged, the red light stops flashing.

Note: The recorder is with built-in high-capacity lithium polymer battery. The battery is with no memory effect. It can be used and charged at anytime. But for the initial five times of charging, please charge battery to saturation after the battery runs out. It is to activate the battery maximum capacity and maintain the standard working time. In order to maximize the capacity of storage battery, please continue to charge for 30 minutes to 1 hour after the indicator light long bright.

g. Setup time: the video recorder provides the mode to display the video record time in video file, you can set the time and the time display or not according to actual needs; the time display format: "year. month. Day Hours: minutes: seconds", setup times are as follows:

a. Turn off the camera—>to connect the computer—> open the removable disk—> click the right mouse button on blank space of the root directory of the device —>move the cursor on "New" option of the pop-up menu —> select "Text Document"—> named "time" to the text document, need to pay attention to its extension name is ". txt" —> completion of setting up time file; you can set up in accordance with the above steps on your desktop, other disk partition, under the other folder and then copy to a removable disk root directory.

b. Open the "time" text document, input the time settings string, the string is composed of "year. month.Day hours.minutes.seconds show/hide flag", set-up times are as follows:

With time shows: 2009.01.01 12.01.01 Y
Do not show time: 2009.01.01 12.01.01 N

The above time string are the time you want to set, attention to the space between year Month day and Hours minutes seconds, the "Y" and "N" is a flag of time display, "Y" means show the time string on the right corner of the video;"N" mean hide the time string.

c. The file of set-up time has been copied to the root directory, uninstall hardware, boot, complete set-up time.

d. The time set up will be saved to the camera inside.

h. Troubleshooting:

When the storage space is insufficient, the blue light and red light flashes alternately about 5 seconds, then automatically save the current files and shut down. If you want to continue to use this video recorder, copy the necessary files to computer and delete the old documents in storage in order to free up enough storage space;

When the battery is insufficient, the blue and red light flash alternately about 5 seconds, then automatically save the current files and shut down. If you want to continue to use the recorder, please charge the battery.

If the video recorder stops responding due to improper operation or other unexpected reason, please use the suitable non-metallic tool to push the reset button.

